


## Parts List for Ejector/Tipper Kit

Item No.	Part No.	Description	Qty
1	OT*****	Oil tank (subject to kit specification)	1
2	AF83	Filler breather assembly	1
3	NR1642	Low pressure elbow - 2"	1
3A	NR1657	Adaptor 1½" to 2" BSP	1
4	VS6	Low pressure shut off valve - 2"	1
5	NR1643	Adaptor assembly - 2" push-on	1
6	SF97/4	Jubilee clip - 2"	2
7	OP506/2000	Low pressure pipe - 2"	1
10	OP87/6/36	Flexible hose assembly - ¾"	2
11	NR611/42	Adaptor - ¾" to ¾" BSP	2
12	DPP45F/SC	Dowty seal - ¾"	3
13	NR611/27	Adaptor - ¾" to 1" BSP	5
14	OP87/8/36	HP flexible hose assembly - 1"	1
15	NR611/43	Adaptor - 1" to 1" BSP	6
16	NR1637	Tee adaptor 12 - 1" female BSP	1
17	DPP45H/SC	Dowty seal - 1"	8
18	OP87/12/48	HP flexible hose assembly - 1½"	2
19	NR1662	Bulkhead connector - 1"	1
20	OP87/8/84	HP flexible hose assembly - 1"	2
21	PM291	3-way diverter	1
22	CT200M075P150	CT200 tipper valve assembly	1
23	OP87/6/60	Flexible hose assembly - ¾"	1
24	V011150H	Relief cartridge	1
25	PM478	Filter cartridge	1
26	AV24*	Tipper air control kit (AV241 hoist only/AV242 hoist & PTO)	1
27	OP87/6/48	Flexible hose assembly - ¾"	1
28	NR1663	Bulkhead connector - ¾"	1
29	OP87/6/84	Flexible hose assembly - ¾"	1
30	QDC100F/ISO	Quick release coupling - 1" male	1
31	QDC100F/W/ISO	Quick release coupling - 1" female	1
32	QDC150F/W/ISO	Quick release coupling - 1½" female	1
33	NR1720	Adaptor - 1½" to 1½" BSP	3
34	DPP45K/SC	Dowty seal - 1½"	3
35	NR1719	Bulkhead 1½" - 1½"	1
36	NR611/41	Adaptor 1½" - 1"	1
37	OP87/12/84	Hose assembly 1½"	1

## PKS Pump Kit \*

Item No.	Part No.	Description	Qty
8	NR1590	2" push-on adapton - 45 degree	1
9	EBA09022	Bent axis piston pump	1
11	NR611/42	Adaptor ¾" - ¾" BSP	1
12	DPP45F/SC	Dowty seal - ¾"	1

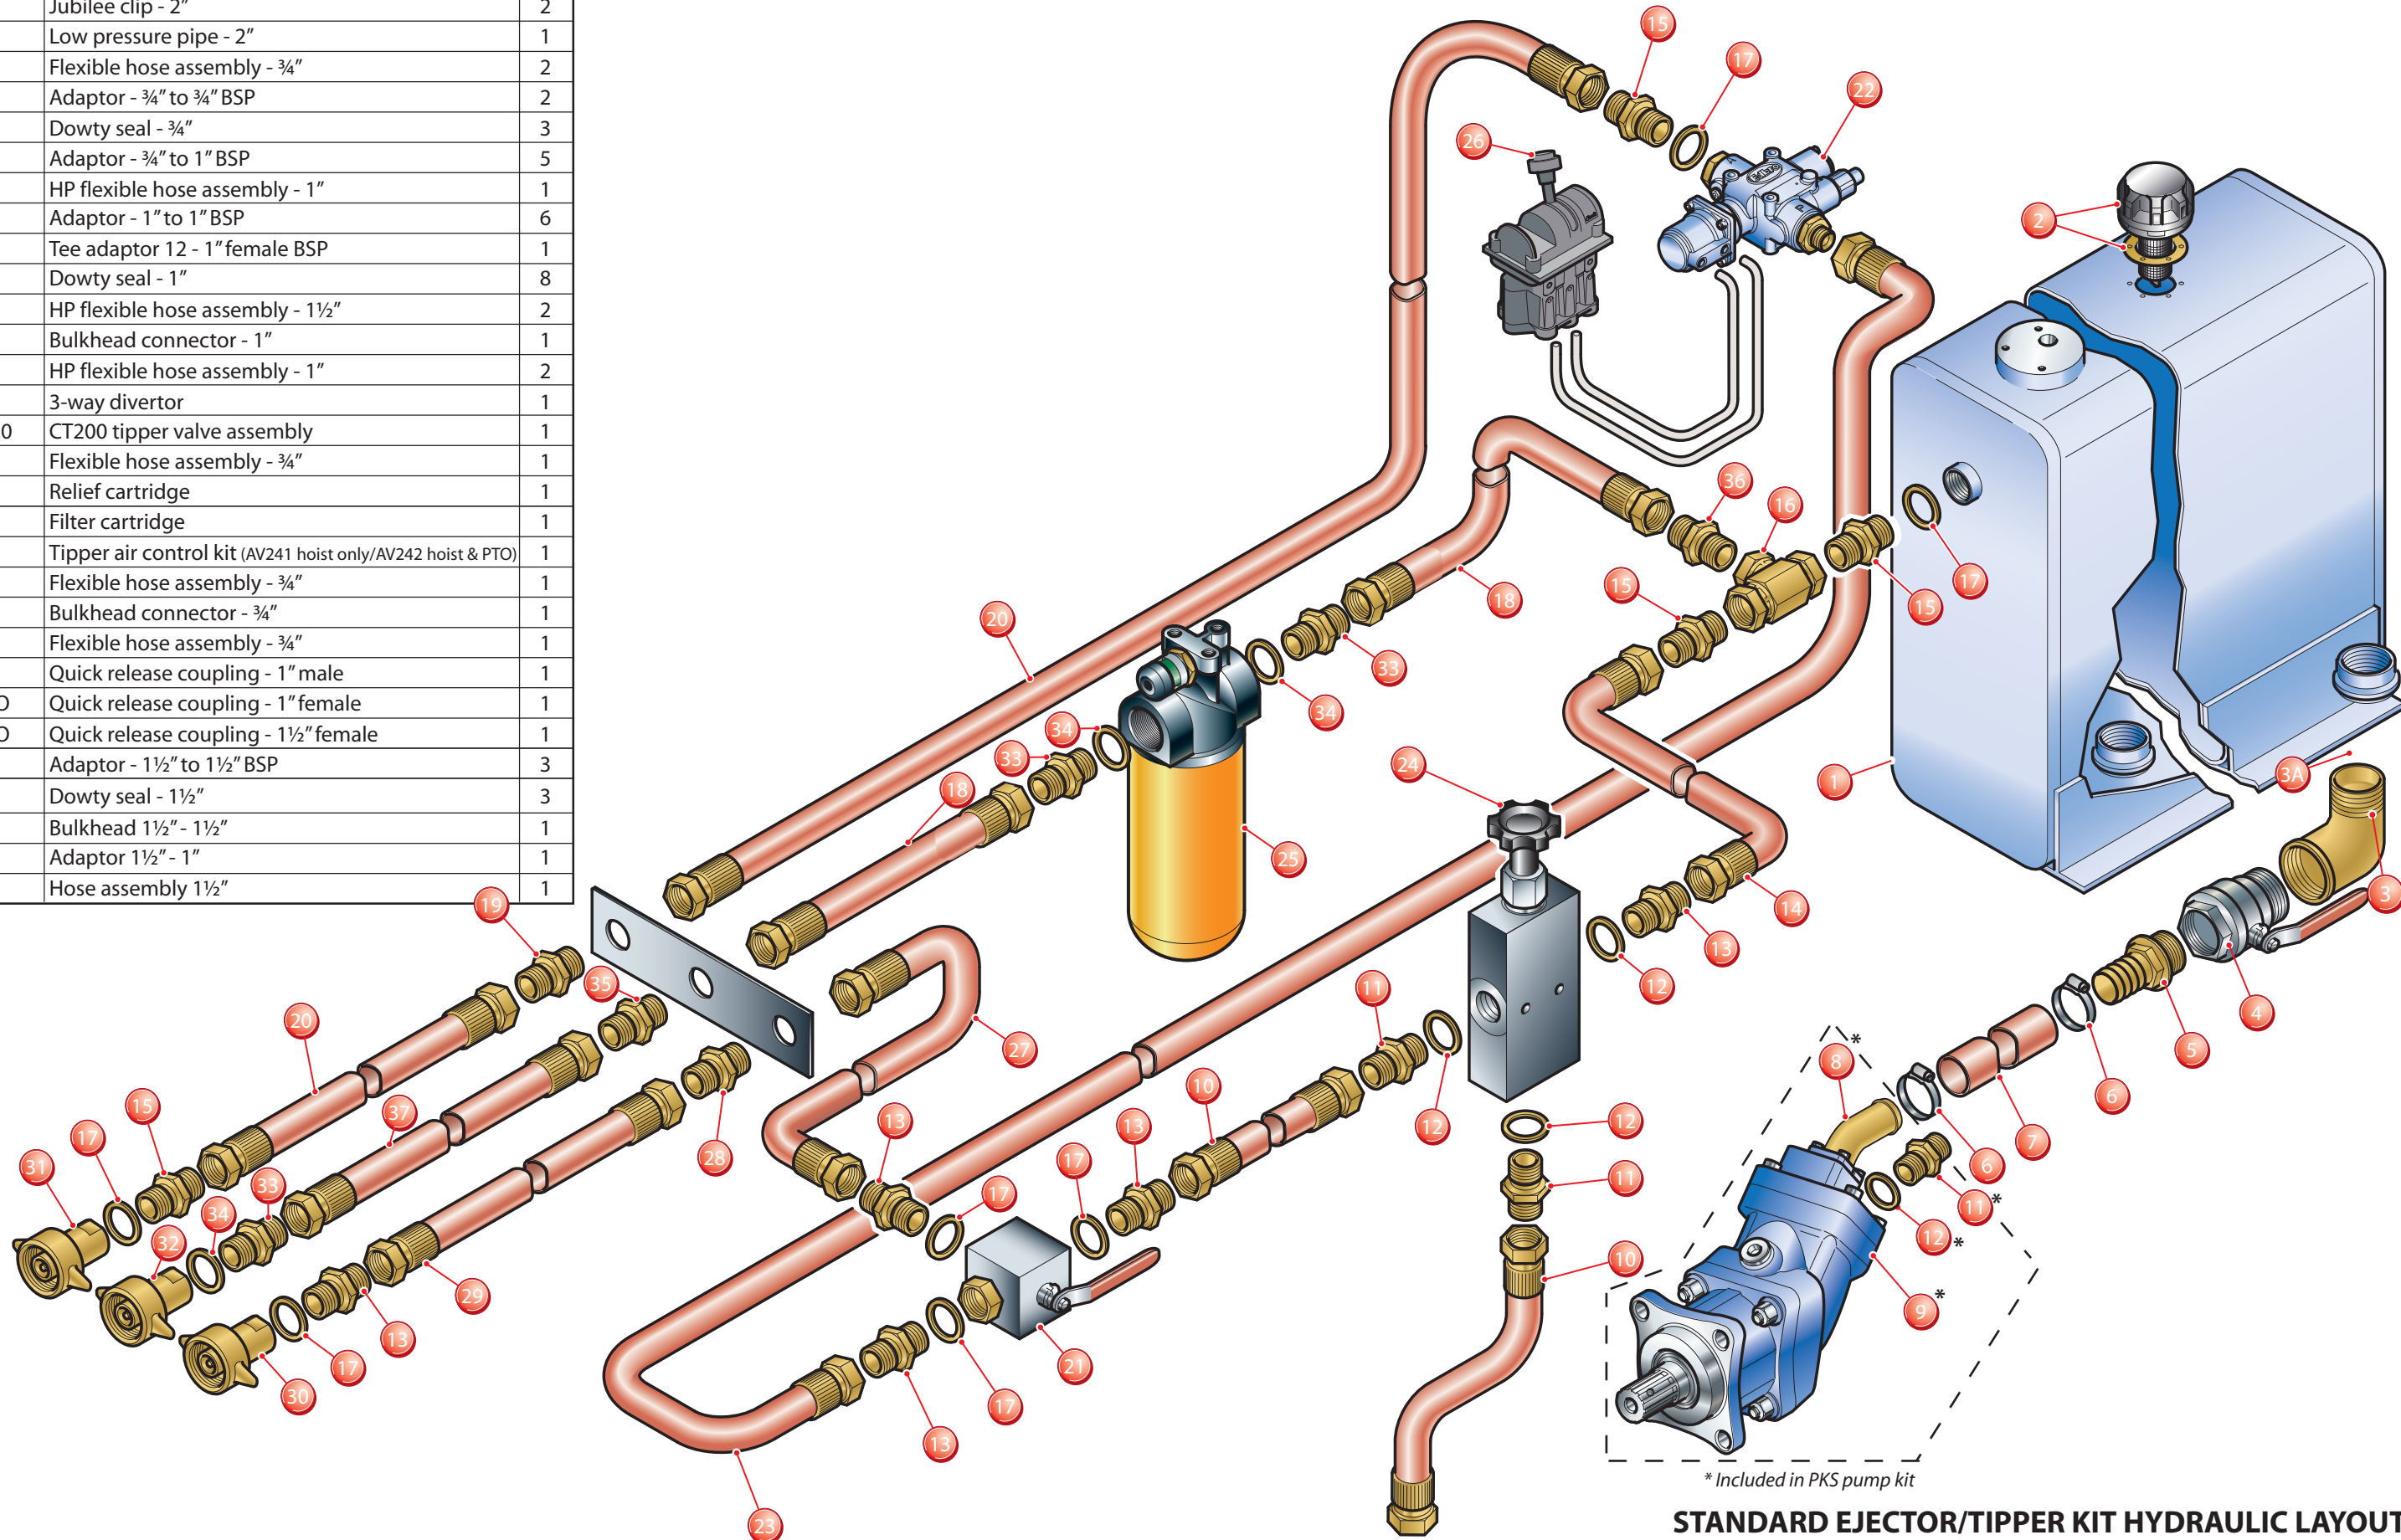

**STANDARD EJECTOR/TIPPER KIT HYDRAULIC LAYOUT**  
(2" SUCTION LINE / 1½" RETURN LINES)